

Tilslut kamera netværket via lan kabel

Indsæt ip adresse i din browser

Login med admin og blankt password.

Vælg network setup > WI-FI

Ændre de to felter som vist på billedet – Du finder din nvr's oplysninger i systemsetup > network > wifisetup.

Hvis nødvendigt kan du ændre wifi ip under wlan0 staticIP

The screenshot displays the 'WI-FI' configuration page in a web interface. On the left is a navigation menu with sections: 'live setup', 'Media', 'Network setup' (highlighted), 'Local setup', 'Remote setup', 'WI-FI', 'Danale', 'Advance setup', and 'System setup'. The main content area is titled 'WI-FI' and contains the following configuration fields:

Wireless Mode	stationMode
StaMode	802.11bgn mixed
StaBssid	123456
StaEssid	NVR9ca3a910a25d
StaPsk	66369073
fixed BPS Mode Enable	<input checked="" type="radio"/> Open <input type="radio"/> close
IP Adapted	<input type="radio"/> Open <input checked="" type="radio"/> close
wlan0 staticIP	172.20.14.40
wlan0 staticNetmask	255.255.255.0

At the bottom of the configuration area is a button labeled 'save wireless configure'. A red circle highlights the 'StaEssid' and 'StaPsk' fields.